


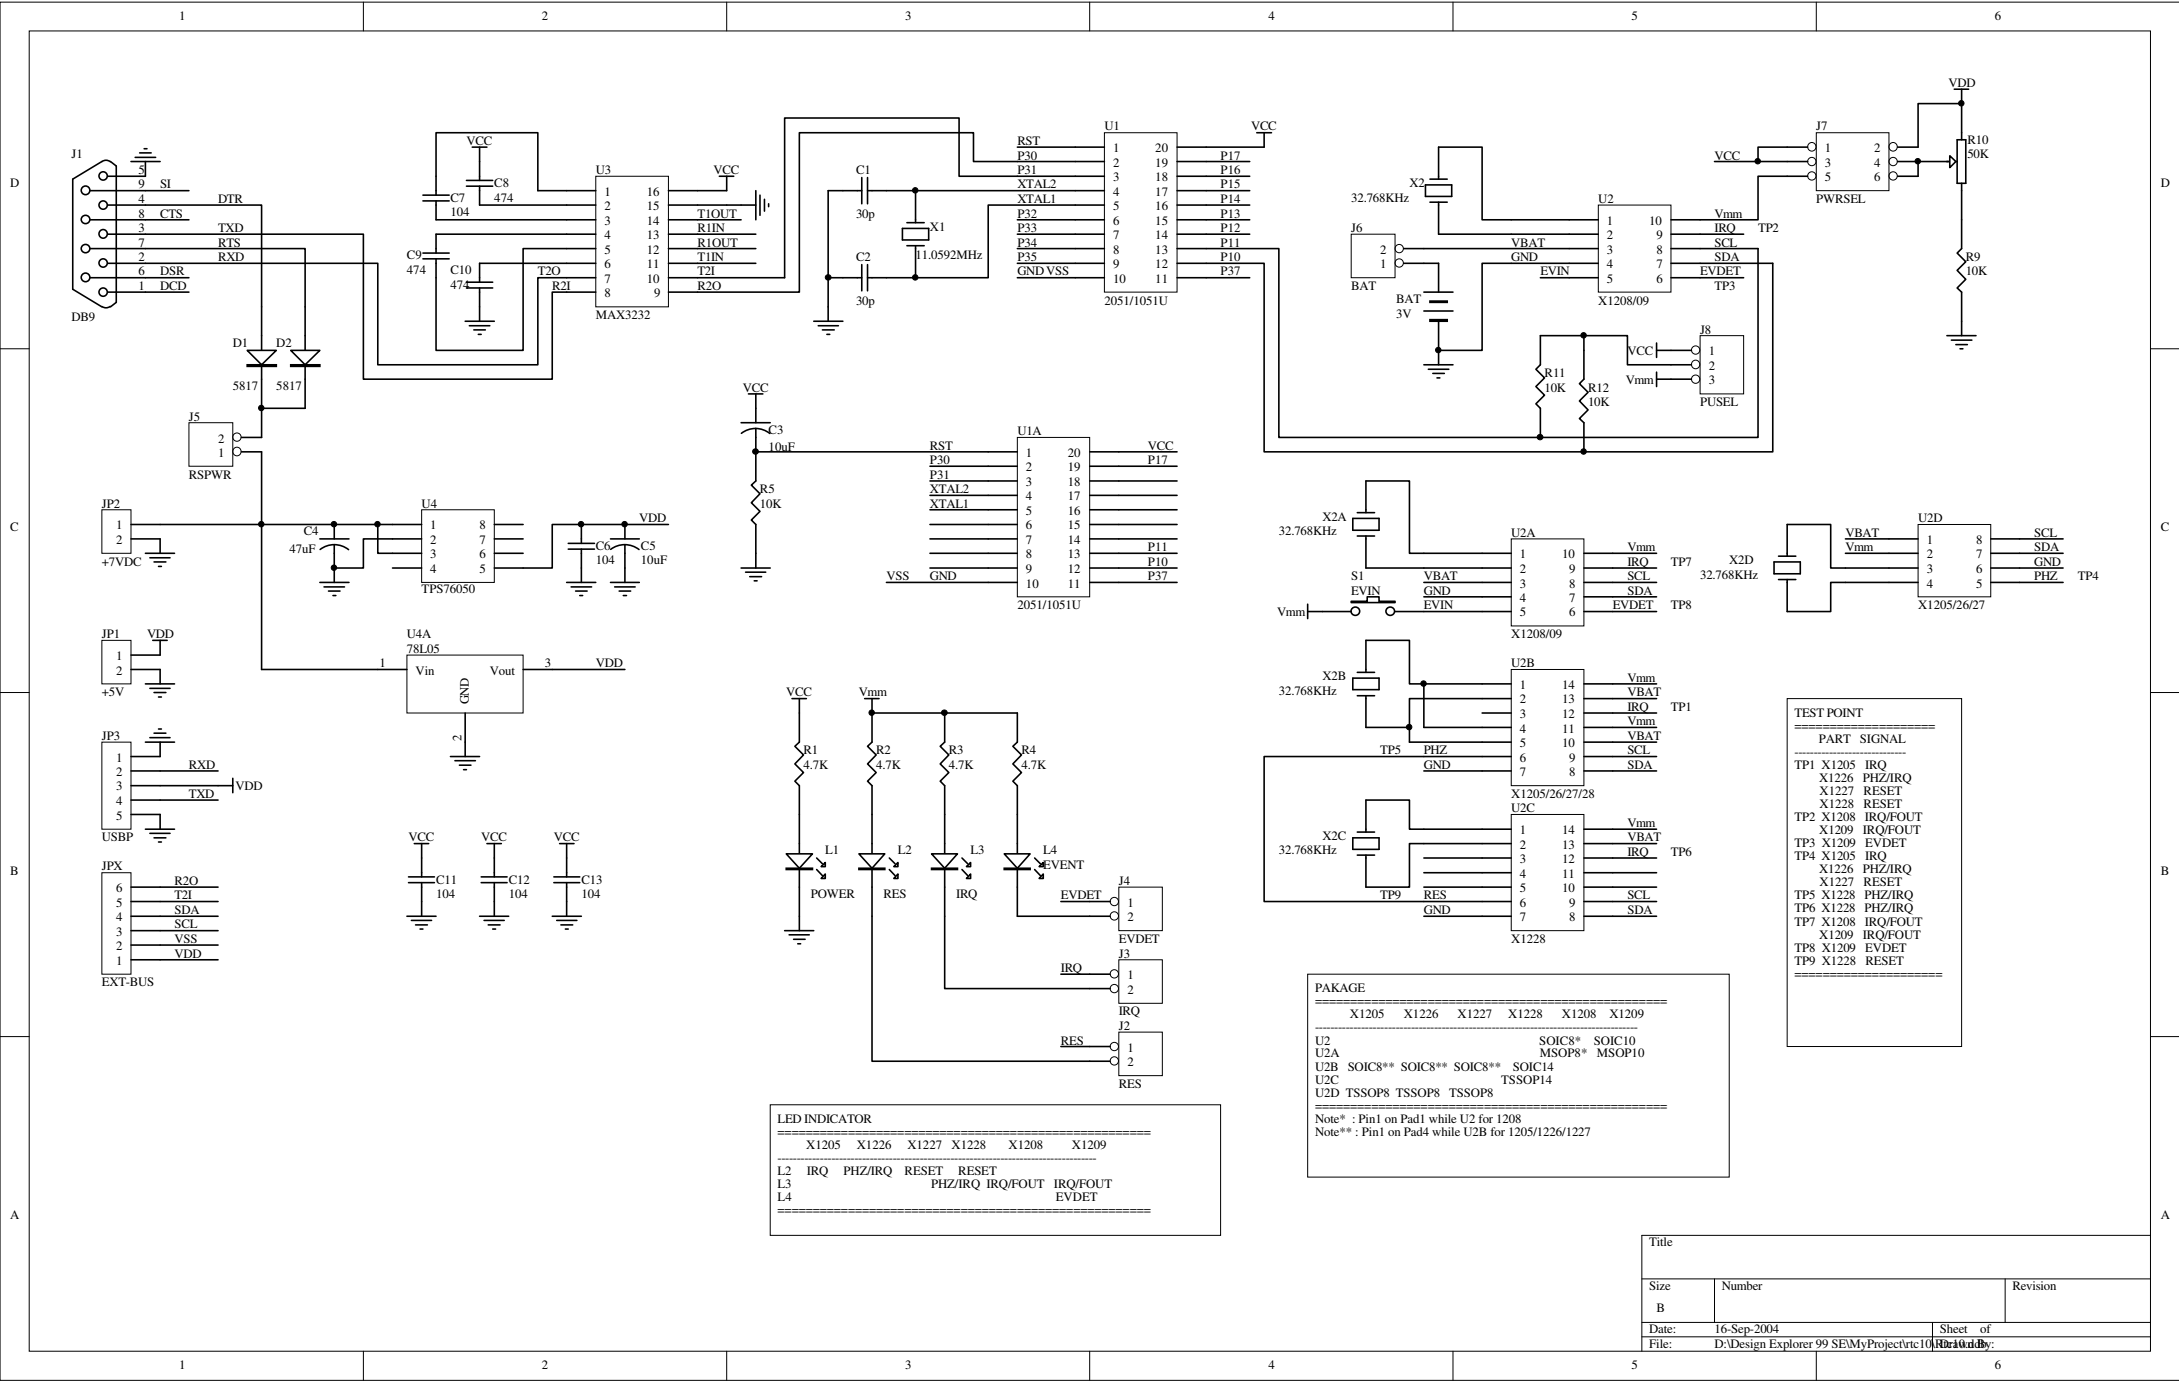

LED INDICATOR						
	X1205	X1226	X1227	X1228	X1208	X1209
L2	IRQ	PHZ/IRQ	RESET	RESET		
L3			PHZ/IRQ	IRQ/FOUT	IRQ/FOUT	
L4					EVDET	

PACKAGE					
	X1205	X1226	X1227	X1228	X1208 X1209
U2				SOIC8*	SOIC10
U2A				MSOP8*	MSOP10
U2B	SOIC8**	SOIC8**	SOIC8**	SOIC14	TSSOP14
U2C					
U2D	TSSOP8	TSSOP8	TSSOP8		
Note* : Pin1 on Pad1 while U2 for 1208					
Note** : Pin1 on Pad4 while U2B for 1205/1226/1227					

TEST POINT	
PART SIGNAL	
TP1	X1205 IRQ
	X1226 PHZ/IRQ
	X1227 RESET
	X1228 RESET
TP2	X1208 IRQ/FOUT
	X1209 IRQ/FOUT
TP3	X1209 EVDET
TP4	X1205 IRQ
	X1226 PHZ/IRQ
	X1227 RESET
TP5	X1228 PHZ/IRQ
TP6	X1228 PHZ/IRQ
TP7	X1208 IRQ/FOUT
TP8	X1209 EVDET
TP9	X1228 RESET

Title		
Size	Number	Revision
B		
Date:	16-Sep-2004	Sheet of
File:	D:\Design Explorer 99 SEM\MyProject\trc10\trc10.dwg	